

Model 116

• Carefully check sealing and condition of rubber sleeves for ball joints on tube shocks of front and rear axle.

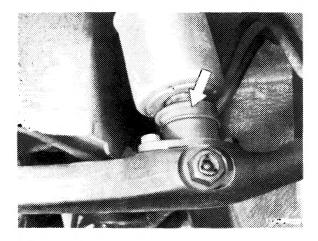

Ball joint on front axle

Note: In the event of a leaking rubber sleeve, replace respective joint immediately since penetrating dirt will result in early destruction of joint. The rubber sleeve alone cannot be replaced.

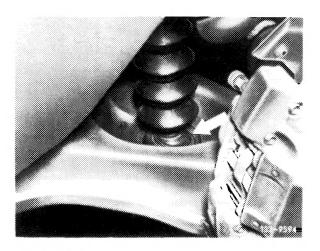

Ball joint on rear axle